



hunterstoves  
GROUP

## INSTRUCTIONS FOR FITTING AND USE OF DAMPER ASSEMBLY

TWO TYPES OF FLUE COLLAR ARE AVAILABLE ON OUR STOVES. IF YOU HAVE THE SHORTER ONE (A) THEN YOU WOULD NEED TO PURCHASE A TALLER COLLAR (B) TO FIT A DAMPER INTO.

(A)



(B)



PART NUMBER – CH08030 (6")

PART NUMBER – CH05010 (5")


1. The cast iron flue collar fitted to the stove has two coach bolts fitted into it, as shown in the picture below.



2. Remove the two coach bolts to expose the two 14mm diameter holes, as shown below.



3. The damper assembly can then be fitted in the flue collar, as shown below.

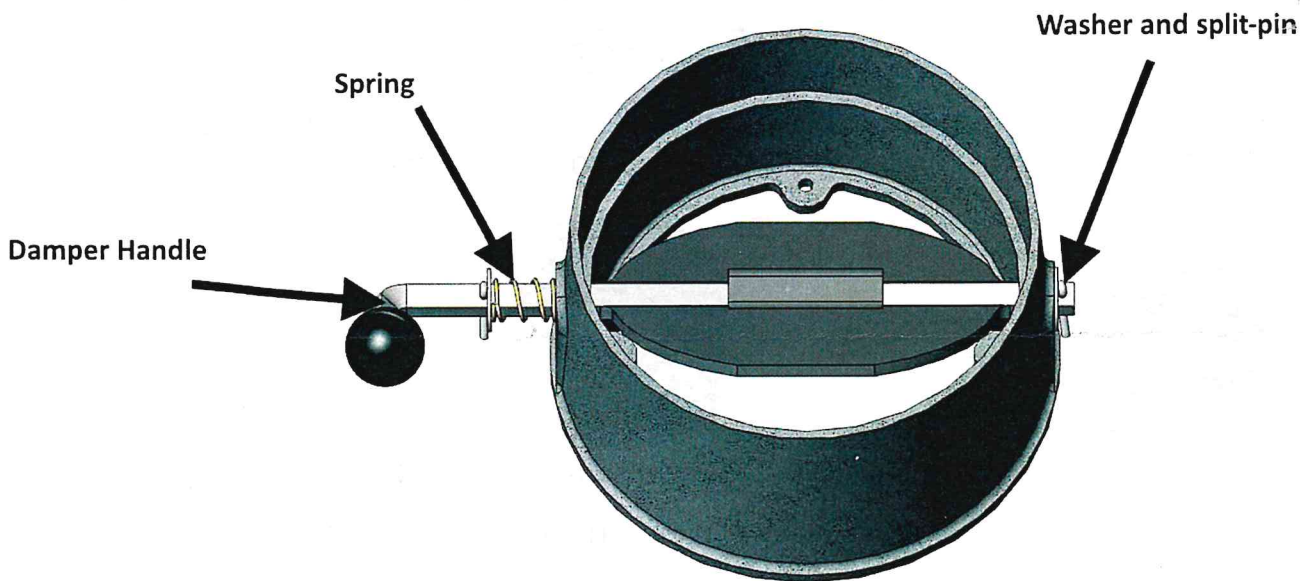

### USER INSTRUCTIONS

**Under no circumstances should a damper be fitted into a stove burning Coal/Coke or any petroleum based fuels.**

Woodburning – the damper can be used at all times when burning wood. However, it should be in an open position when re-fuelling.

Manufactured smokeless fuel – the damper should be in an open position for approximately 20 minutes after refuelling to allow for gases to burn off. Once this has been done it can then be closed. The damper should be in an open position when re-fuelling.