
6556

How to replace the glass in a MF100/MF200/SE100.

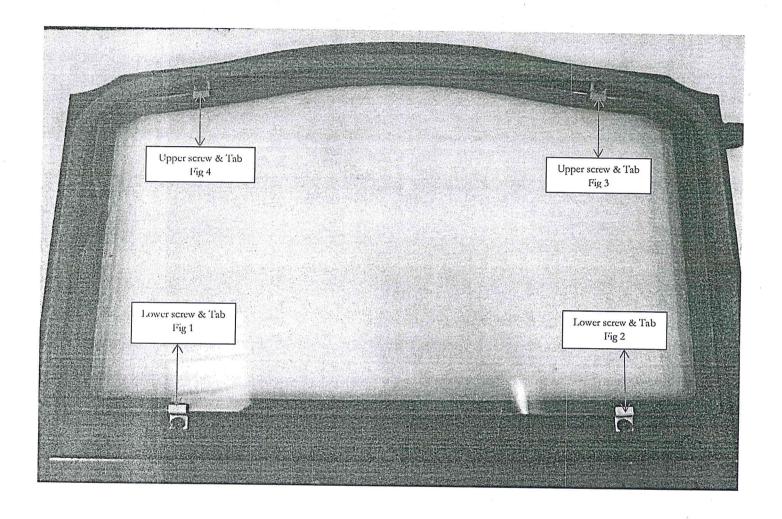

- Loosen the bottom 2 screws (Fig 1 & 2)
- Unscrew the top two screws (Fig 3 & 4) and remove the tabs, remove the broken glass taking extra care to remove it safely.
- Replace with new glass, replace the upper screws (Fig 3 & 4) DO NOT tighten the screws, make sure that all the glass tabs are in place.
- Turn the screws in sequence (1,3,2,4) until resistance is felt against the glass, once this has been done tighten the screws a 1/4 turn.
- By not replacing the glass tabs and tightening the screws to tight will result in the glass breaking.