


INSTRUCTIONS FOR REPLACING CERAMIC ROPE AND GASKETS ON YOUR HUNTER GROUP STOVE SINGLE DOOR




WARNING - Please wear gloves when handling ceramic rope and gasket(s).

CONTENTS

Rope Adhesive x 1/ Ceramic Rope - To suit your individual stove/ Gasket x 1

1. Remove the door from the stove as shown below.
- 5.

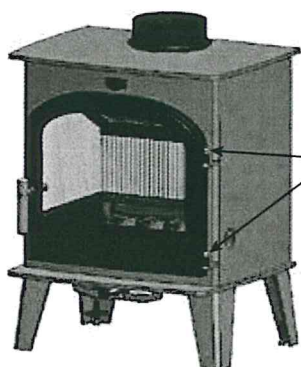


Ensure the door is supported and open.
Lift up hinge pins as shown and remove.

2.



Un-screw the glass retaining screws and place Glass, Clips and Screws to one side.

3.

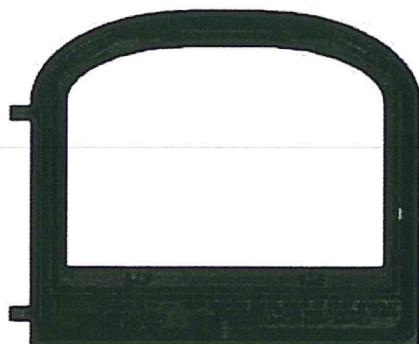


Remove the gasket and all old ropes and glue.
Ensure that the grooves are clean and free of residue.

4. Generously spread the adhesive along the rope groove only. The gasket does not require glue to be fixed.



Push the Ceramic Rope firmly into place starting at one end. Take care not to stretch the rope during this process.

6.

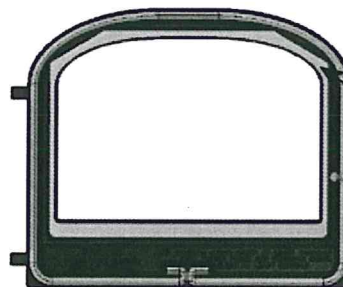

Replace the gasket by setting in place.

Put the glass on top and then fix with the clips and screws. Do not over tightened the clip and screw. These need to be finger tight to allow for expansion and contraction of the glass.

7. Leave to dry for at least 4 hours.

8. Re-fit the door to the stove. You may need to adjust the door catch (as shown in your instructions) to ensure a good seal when shut.

If there are any issues with the door sealing on the stove after refitting then please consult an engineer.